RM-S78/S78T/V30

SERVICE MANUAL

REVISED

US Model
RM-V30

AEP Model
RM-S78/S78T

UK Model
RM-S78T

E Model
RM-V30

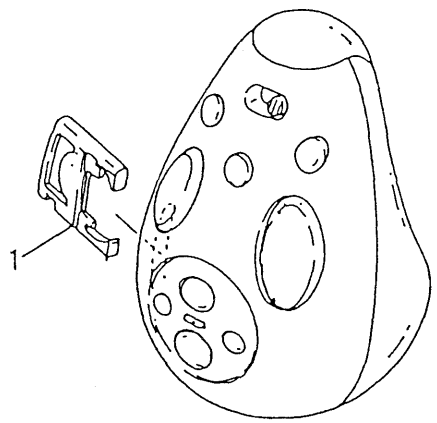

Ref. No.	Part No.	Description	Remark
1	4-966-394-01	HOLDER, BATTERY (BLACK)	
1	4-966-394-11	HOLDER, BATTERY (RED)	

****

ACCESSORIES & PACKING MATERIALS

****

3-759-767-11 MANUAL, INSTRUCTION (RM-S78) (ENGLISH, SPANISH)
3-759-838-11 MANUAL, INSTRUCTION (RM-S78T) (ENGLISH, SPANISH)
3-759-838-41 MANUAL, INSTRUCTION (RM-S78T) (FRENCH, GERMAN)
3-759-838-51 MANUAL, INSTRUCTION (RM-S78T) (DUTCH, SWEDISH)
3-759-838-61 MANUAL, INSTRUCTION (RM-S78T) (ITALIAN, PORTUGUESE)
3-759-824-21 MANUAL, INSTRUCTION (RM-V30) (ENGLISH)

REMOTE COMMANDER

SONY®

9-959-789-13

Sony Corporation
Personal A & V Products Company

96L0583-1
Printed in Japan

© 1996. 12

Published by Quality Engineering Dept.
(Shibaura)